



Usually the Active/Passive switch is on the Volume control (part # a250kAp-p)

It could also be placed on the Treble, Mid or Bass control (part # cd50kSp-p)

### Active/Passive Switching using a DPDT (on-on) toggle switch

