




GROUND SYMBOL; ANY TIME YOU SEE THIS SYMBOL ATTACHED TO A WIRE, THAT WIRE NEEDS TO BE SOLDERED TO GROUND (Ground points are usually soldered to the back of the volume or tone pots or to any central ground point on the guitar; The central ground usually comes from a wire attached to the bridge of the guitar)



SOLDER POINT SYMBOL; THIS SYMBOL REPRESENTS THE PLACE AT WHICH TO SOLDER THE WIRE(S) TO THEIR CONTACT POINTS

SPDT ON-ON, DPDT ON-ON, OR
PUSH-PULL POT

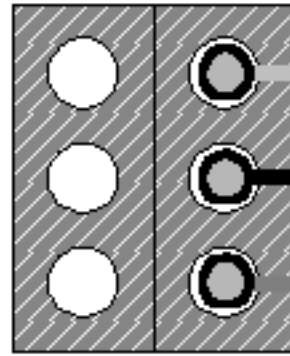

HOT FROM PREAMP OUT

HOT TO VOLUME POT IN

HOT FROM PICKUP OR
BLEND POT

NOTE: Most ACTIVE pre-amps use low impedance pots, (10k-100k). It is recommended to use 100k-250k pots with this mod.

ACTIVE-PASSIVE SWITCH DIAGRAM

COPYRIGHT 2001 SEYMOUR DUNCAN / BASSLINES



**Seymour
Duncan®**

BASS LINES®